

# Boat Lift Boss Remote Programming

## Step 1) Identify Your Remote



## Step 2) Identify Your Boat Lift Boss



Proceed to Generation 4  
Programming

Proceed to Generation 3  
Programming



Proceed to Generation 1-2 Programming

### Generation 4 Programming:

1. Unplug the Boat Lift Boss from the power source.
2. Turn the unit key in either direction to reset the unit.
3. Press and hold the "Light Control" button on the remote control and reconnect the power to the Boat Lift Boss unit.
4. Continue to hold the "Light Control" button for 5 seconds.

### Generation 3 Programming:

Generation 3 receivers may be paired with up to two remotes. Should a new remote not program to the Boat Lift Boss, the receiver may be full and **must be cleared using a remote already paired to the Boat Lift Boss**. To clear pairings, press and hold the Light Control button on a paired remote for ten seconds.

1. Unplug the Boat Lift Boss from the power source.
2. Turn the unit key in either direction to reset the unit.
3. Press and hold either the "Raise Boat" or "Lower Boat" button on the remote control and reconnect the power to the Boat Lift Boss unit. A properly programmed unit will begin operation as soon as power is restored.

### Generation 1-2 Programming:

1. Unplug the Boat Lift Boss from the power source.
2. Turn the unit key in either direction to reset the unit.
3. Press and hold either the "Raise Boat" or "Lower Boat" button on the remote control and reconnect the power to the Boat Lift Boss unit. A properly programmed unit will begin operation as soon as power is restored.