

SMR, DAK, NEW, POR, FNR, SUM, TRI, VIB

ShoreMaster, Daka, Newman, Porta Lift, Feighner, Summit, Triton, Vibo,

Remove the cover from the box. Place the canopy fabric bundle on top of the frame and unroll the canopy down the center of the frame. When completely unrolled, unfold the cover across the top of the canopy bows and pull down snugly over the frame. Make sure the canopy is centered on the frame with equal amounts of overhang on each side and on each end.

The QuikLash black webbing should be on the inside, right behind or slightly above the aluminum canopy frame going lengthwise.

This canopy uses individual bungee loops with a hook on the end. Attach each bungee through a perforated hole of the QuikLash webbing directly in-line with each canopy rib. Stretch the bungee underneath the canopy frame and up into the hole in the corresponding frame rib. Alternate from side to side and end to end to make sure the top does not become off centered.

*** Some canopy frames feature a support bar welded across the length of the canopy frame. Attach each bungee through a perforated hole of the QuikLash webbing and stretch bungee underneath the canopy frame and upward... hooking the bungee hook onto the horizontal support bar. Evenly space the bungees around the perimeter of the frame, alternating from side to side and end to end.

*Additional tension can be created by tying a knot in each individual bungee hook.

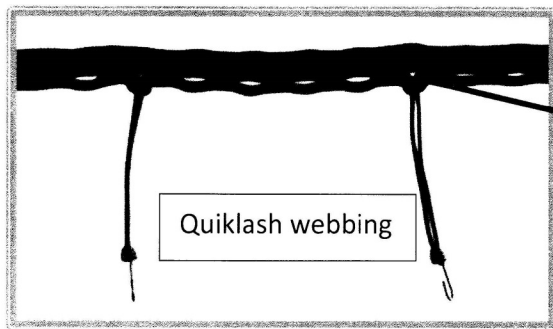


Fig. A

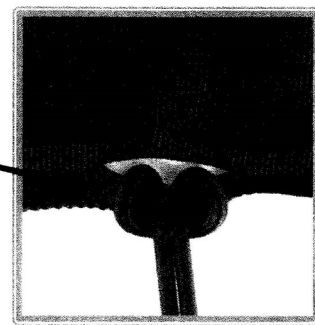


Fig. B

Removal: Simply unhook the bungee from the holes in the ribs or unhook from the support bar. It is not necessary to remove the bungees from the canopy cover. The bungees can remain looped through the quiklash webbing and ready for next seasons installation.

Storage: Make sure your canopy cover is DRY and clean prior to off season storage. Store in a clean and dry environment.

Caution: Always wear eye protection and gloves when installing the bungee cords. These cords are under tension and can cause injury if released unexpectedly.