

BEACH KING

Canopy Installation Instruction

Remove the cover from the box. Place the canopy fabric bundle on top of the frame and unroll the canopy down the center of the frame. When completely unrolled, unfold the cover across the top of the canopy bows and pull down snugly over the frame. Make sure the canopy is centered on the frame with equal amounts of overhang on each side and on each end, the QuikLash (black webbing) should be on the inside, slightly above the aluminum canopy frame.

This canopy uses buckle straps along the sides and velcro clasps along the ends. Take the loose end of the buckle strap and insert it through the slit in the quiklash webbing.(Fig. A) Next, lace the loose end through the male end of the buckle as shown in (Fig. B, C)

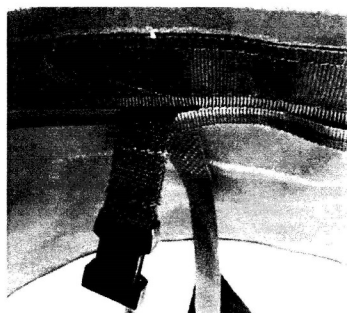


Fig. A



Fig. B

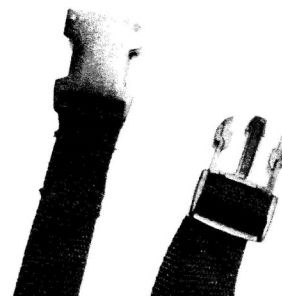


Fig. C



Next, run the male end under the frame and the female buckle over the frame and click the buckle together. Adjust the tension by pulling on the loose end of the strap. The strap should pull the canopy snugly to the frame. Alternate from one side of the canopy to the other to avoid off centering the canopy.

Velcro clasps on each end are meant to hold the canvas ends snug to the aluminum cross beam. Please note, these Velcro clasp's need only be snug and not overly tight.

Please Note!! It is important to use ALL of the strap buckles that come with your canopy cover. Failure to do so can result in your canopy being loose and subject to abuse from the outdoor elements. Failure to install canopy correctly may result in void of warranty.

Removal: Simply unhook the buckles by pinching the sides. The buckles can remain looped through the quiklash webbing and ready for next seasons installation.

Storage: Make sure your canopy cover is DRY and clean prior to off season storage. Store in a clean and dry environment